




# Assembly Instructions


1.

Deflate tire. Align the outside of the wheel with the chamfer cut side of the tread.

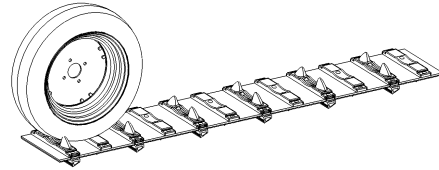


2.

Roll track around tire.

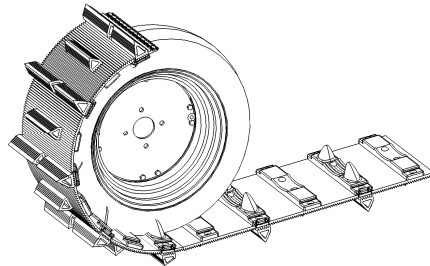


3.

Insert pin into alligator clips.

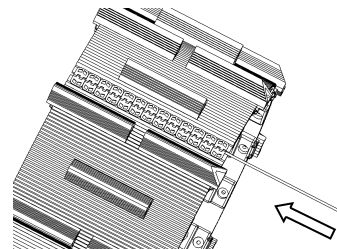

4.

Inflate tire 40 - 45 psi.

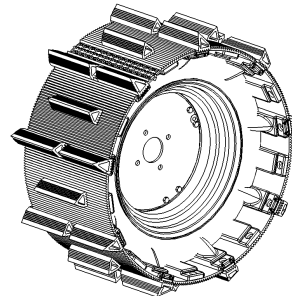

## ETV DESIGNS

14960 SW Tualatin Sherwood Rd  
Sherwood, OR 97140

Phone: 503-625-9780  
Fax: 503-625-0203  
[www.etvdesign.com](http://www.etvdesign.com)

*When you absolutely  
have to get there.*